



## CH100 CORN HOLE CASH-IN

**This beanbag toss game is a sure winner for sales promotions and fundraisers. Corn Hole Cash-In features sound effects, chasing colored LED lighting, scrolling message board, locking casters and constructed of solid birch plywood and Lexan for years of reliable performance. 15 interchangeable prize plaques are included for the header display area. Each of the 9 holes on the playfield will light the corresponding prize when a beanbag lands inside the pocket. The Jackpot payout is noted on your scrolling message sign. The Jackpot payout is approximately 3% when tossing the beanbags from 15 to 20 ft.**


**FUN**  
INDUSTRIES INC.

627 15th Ave.  
East Moline, IL 61244  
Toll-free 1-800-747-1144  
Local 309-755-5021  
Fax 309-755-1684

# ASSEMBLY INSTRUCTIONS


1. After unpacking all items, lay the upper header of game face down on a soft surface and attach the (2) square support tubes to the bottom left and right sides of the header with (8) ½” socket head screws. Make sure to feed the electrical connector through the tube on the right and then fully tighten screws.

**FEED CONNECTOR THROUGH TUBE**

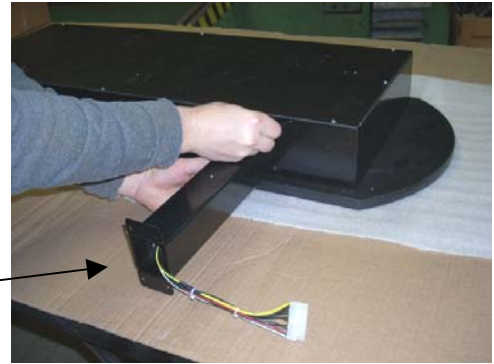

2. Have an assistant help you lift the header to the top of the game base with the printed areas facing forward. Make sure to feed the electrical connector into the hole on the top of the base cabinet.

**FEED CONNECTOR THROUGH HOLE**

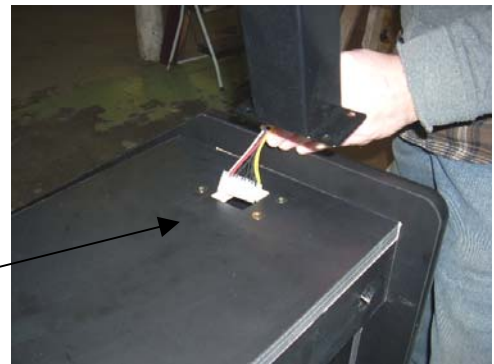

3. While your assistant is holding the header in place, fasten the header to the base cabinet with (8) ½” socket head screws and fully tighten.




4. Remove the rear door from the base cabinet and connect the electrical connector from the header to the electrical connector hanging on the wall in the base cabinet.

**PLUG CONNECTORS TOGETHER**



5. Locate the message sign hardware bag and attach (2) mounting brackets to the pre-drilled holes on the square tubes using (2) 1/4" phillips screws. Insert the screws through the center holes on the brackets with the long legs of the brackets towards the center of the machine and tighten fully.

### MOUNT MESSAGE SIGN BRACKETS

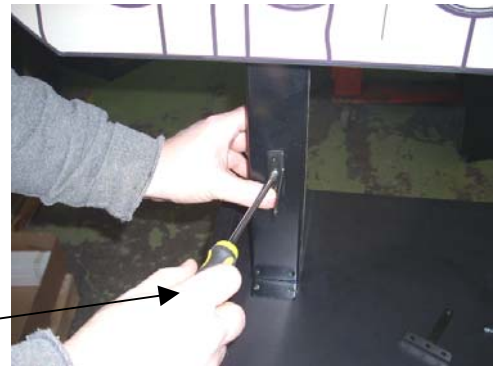

6. Locate the message sign power connector that is protruding through the bottom of the header box and connect it to the female socket on the side of the message sign.

### CONNECT MESSAGE SIGN PLUG



7. Mount the message sign to the mounting brackets on the tubes using (2) 1" Phillips screws and fully tighten. You may now plug in the main power cord located in the bottom of the main cabinet. Feed the power cord through the slot in the rear door and lock the door in place.



8. Two remote controls are included for the message sign and also the chasing lighting. Please refer to the instructions included in your packaging for the proper operation of each remote. *\*Please note that there is a switch to disable the jackpot siren located on the wall inside the base cabinet next to the serial tag.*

### MESSAGE SIGN REMOTE

### CHASING LIGHTING REMOTE





## **FUN INDUSTRIES INC. NEW MACHINE WARRANTY**

**TERM:** 1 year from invoice date. (Optional renewal thereafter)

**PHONE SUPPORT:** Unlimited

**COMPONENT SUPPORT:** All electronic components including wiring harnesses, buttons, switches, transformers, digital timers, electronic eyes, solenoids and printed circuit boards; as well as the blower assembly to include the fan and motor components will all be supported during the term of this agreement. Any failure that identifies one of the covered components will result in replacement or repair of the affected items. Installation of the replaced items is by customer's technician with phone support by FUN.

**EXCLUSIONS:** Warranty does not include normal wear and tear items. Light bulbs, light ropes, frame components, cabinets, glass, polycarbonate, wheels, casters, paint or finish or return freight unless failure is the result of a manufacturing defect. Also excluded is any damage resulting from moving, shipping, water damage, and outdoor use not typically associated with promotional locations. All message boards, amplifiers, and microphones are covered by the original manufacturer, please send in your warranty card.

**RETURN PARTS POLICY:** All customers must call for pre-authorization of returned parts. Warranty parts will not be exchanged until defective parts have been returned to Fun Industries unless an account has been secured with a credit card assuring the replacement price of any unreturned components. It is the responsibility of all customers to prepay shipping charges back to Fun Industries. Fun Industries will be responsible for return ground UPS charges on replacement of parts. Premium freight requested for expedited shipments is available at customer's option.

**RENEWAL:** FUN will invoice for an Extended One Year Warranty 30 days in advance of expiration, that when accepted and paid will renew this warranty (see renewable warranty).

**EXPIRATION:** After 30 days of nonrenewal due to failure to receive payment of a renewal invoice, the machine may be required to submit to an inspection at Fun's East Moline, IL facility prior to subsequent renewal. Round trip freight charges for the inspection become the responsibility of the customer.

**MINIMUM CONDITIONS:** Customer agrees to use only grounded 120/240V receptacles within 10 feet of the machine, or a minimum 12 gauge grounded extension cord not exceeding 100 feet. Alternative power situations can be discussed with FUN's specific approval.



627 15th Ave.  
East Moline, IL 61244  
Toll-free 1-800-747-1144  
Local 309-755-5021  
Fax 309-755-1684

REVISED 6-20-08