



## Fun Industries Inc. One Arm Bandit Operation Instructions

**\*NOTE: If using this machine for a raffle box or lead generator see page 3**

1. Remove all protective film from machine walls and decals.
2. Unlock and remove the machine lid. Remove the rotating beacon box and fill machine with 75-100 wrinkled bills. (We recommend inserting an anti-static fabric sheet with the money to help keep the bills from sticking to the lexan walls. Simply remove the sheet when a participant is involved.) Then reattach and lock the lid.
3. Attach the rotating beacon to the Velcro on the lid and plug it into the receptacle at the top of the machine.
4. Plug the power cord in and flip power switch to desired position. One position of the power switch allows the operator to use the “Start” button to run the blower in 10 second timed cycles and the opposite position of the power switch allows the unit to run constantly for display purposes.
5. Unlock and remove the arm tube cover. Allow the participant to place one arm through the tube. Once ready, push the start button and the participant will be allowed to catch and hang onto as many bills as they can in 10 seconds. Once the blower stops, they must remove their winnings through the arm tube. Allow the participant to only put their arm in the machine one time!

**Note: This machine has been preset at the factory to blow for approximately 10 seconds. You may adjust this time by removing the steel cover under the machine and turning the screw located on the timer. It can be set to run between 3 and 60 seconds. See enclosed wiring diagram for details.**

**FUN**  
INDUSTRIES INC.

627 15th Ave.  
East Moline, IL 61244  
Toll-free 1-800-747-1144  
Local 309-755-5021  
Fax 309-755-1684

# BASIC INSTRUCTIONS



Attach beacon to lid  
and fill with 75-100  
wrinkled bills



Arm tube with  
cover and lock

Power and start controls  
Switch up = 10 second timed  
Switch down = always on



Adjustable timer  
(under steel cover)

## Supplemental Instructions for CB200D

**\*Deluxe One Arm Bandit models only\***

Set the machine on the base and feed the machine power cord through the hole.



Plug the machine power cord into the outlet in the rear of the base unit. Notice the main power switch is located here. Then plug the main power cord at the bottom of the base into a wall outlet and turn the power switch on.



Plug the 3-way cord adapter into the outlet on the lid of the machine then plug the beacon and overhead light into the 3-way adapter.






## RAFFLE BOX OR LEAD GENERATOR INSTRUCTIONS

This machine can also be used for collecting and mixing raffle tickets or entry forms for lead generation or prize drawings. Simply follow the directions from page 1 with the exception of inserting cash. A decal has been provided to be placed on the arm tube locking plate defining where to insert tickets or forms. The blower may be used to mix these pieces and a participant will be required to draw the winning names/numbers from the machine. See the illustration below for attaching the decal to the tube plate.

PLACE DECAL HERE

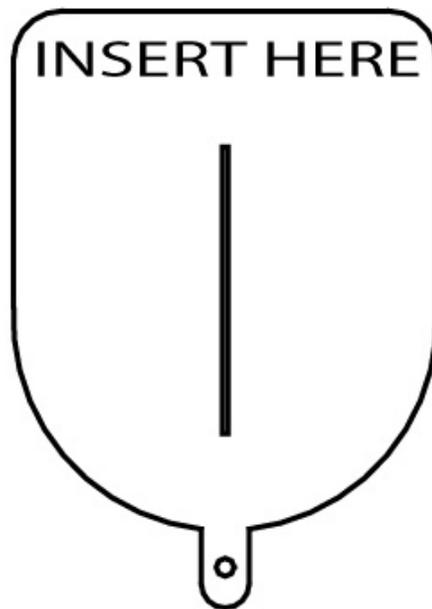

**FUN INDUSTRIES INC.  
NEW MACHINE WARRANTY  
Money Machines**

**TERM:** 120 days from invoice date. (Optional renewal thereafter)

**PHONE SUPPORT:** Unlimited

**COMPONENT SUPPORT:** All electronic components including wiring harnesses, buttons, switches, transformers, digital timers, electronic eyes, solenoids and printed circuit boards; as well as the blower assembly to include the fan and motor components will all be supported during the term of this agreement. Any failure that identifies one of the covered components will result in replacement or repair of the affected items. Installation of the replaced items is by customer's technician with phone support by FUN.

**EXCLUSIONS:** Warranty does not include normal wear and tear items. Light bulbs, light ropes, frame components, cabinets, glass, polycarbonate, wheels, casters, paint or finish or return freight unless failure is the result of a manufacturing defect. Also excluded is any damage resulting from moving, shipping, water damage, and outdoor use not typically associated with promotional locations. All message boards, amplifiers, and microphones are cover by the original manufacturer, please send in your warranty card.

**RETURN PARTS POLICY:** All customers must call for pre-authorization of returned parts. Warranty parts will not be exchanged until defective parts have been returned to Fun Industries unless an account has been secured with a credit card assuring the replacement price of any unreturned components. It is the responsibility of all customers to prepay shipping charges back to Fun Industries. Fun Industries will be responsible for return ground UPS charges on replacement of parts. Premium freight requested for expedited shipments is available at customers option.

**RENEWAL:** FUN will invoice for an Extended One Year Warranty 30 days in advance of expiration, that when accepted and paid will renew this warranty (see renewable warranty).

**EXPIRATION:** After 30 days of nonrenewal due to failure to receive payment of a renewal invoice, the machine may be required to submit to an inspection at Fun's East Moline, IL facility prior to subsequent renewal. Round trip freight charges for the inspection become the responsibility of the customer.

**MINIMUM CONDITIONS:** Customer agrees to use only grounded 120/240V receptacles within 10 foot of the machine, or a minimum 12 gauge grounded extension cord not exceeding 100 feet. Alternative power situations can be discussed with FUN's specific approval.



627 15th Ave.  
East Moline, IL 61244  
Toll-free 1-800-747-1144  
Local 309-755-5021  
Fax 309-755-1684

REVISED 6-20-08